
grenacontrol®


Inspection Door - UNIVERSAL


The change in the opening direction of the door.

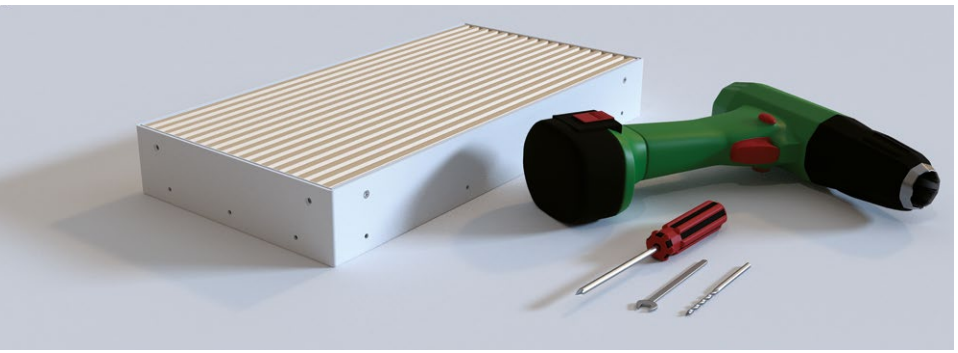


For the installation you will need:


- a Phillips screwdriver
- a spanner 7 mm
- a drill + a drill bit Ø 4 mm

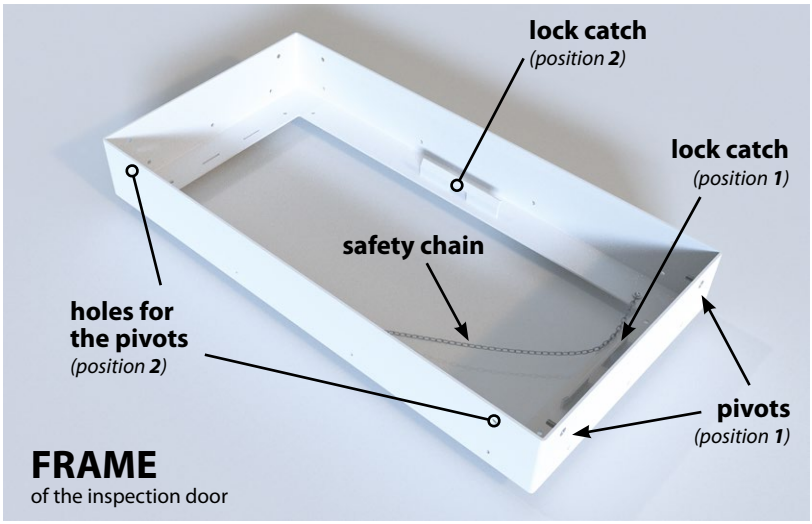

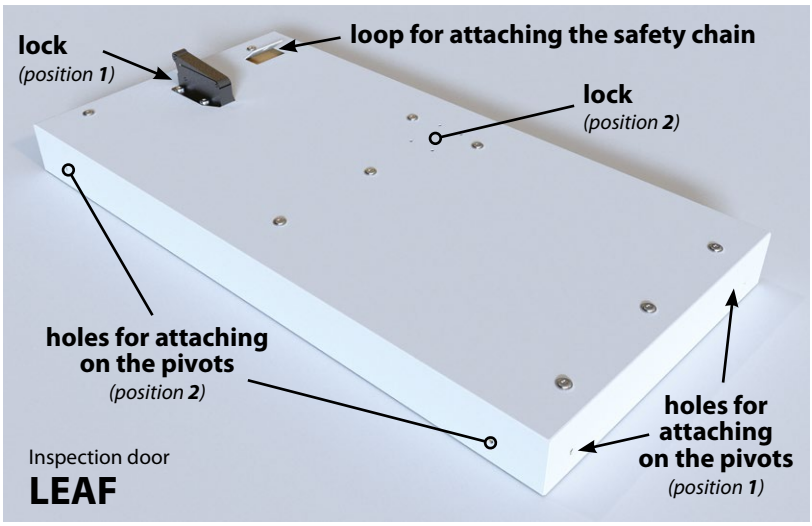

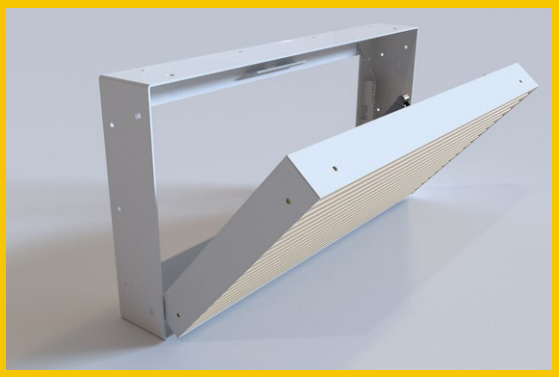


1. Open the door leaf out of the frame, release the safety chain and remove the leaf from the frame.

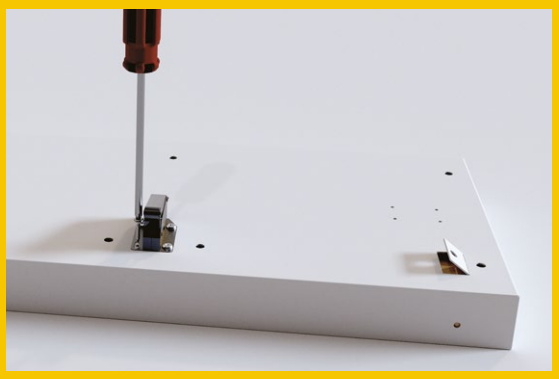


2. From the door leaf unscrew the lock from position 1 and screw it on to position 2.

(only for dimensions 500 x 400 and 400 x 300 mm)

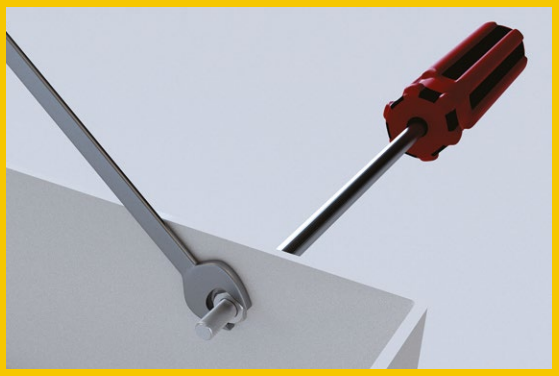

3. From the frame unscrew the pivots from position 1 and screw them on to position 2.

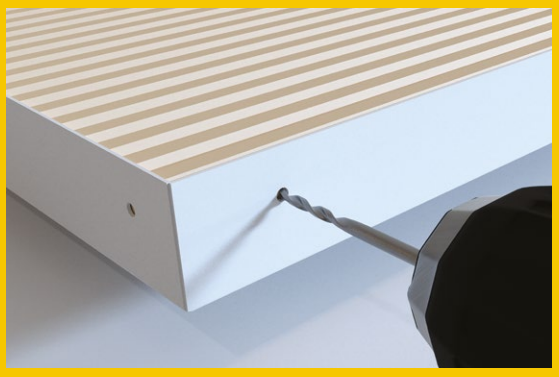

4. In the door leaf deepen the holes for the pivots (position 2) up to 10 mm.

5. Put the door leaf in the frame, fasten the safety chain and close the door leaf.

grenacoat®

Distributor: **www.grena.cz** | grenamat@grena.cz | +420 381 549 215

GRENA, a.s., Třída Čs. armády 541, 391 81 Veselí nad Lužnicí II, Czech Republic

grenacontrol®


Inspection Door - UNIVERSAL

Installation of an inspection door.

? Before you start check the opening direction of the inspection door.

Do you need to change the opening direction?


Follow the instructions on the previous pag

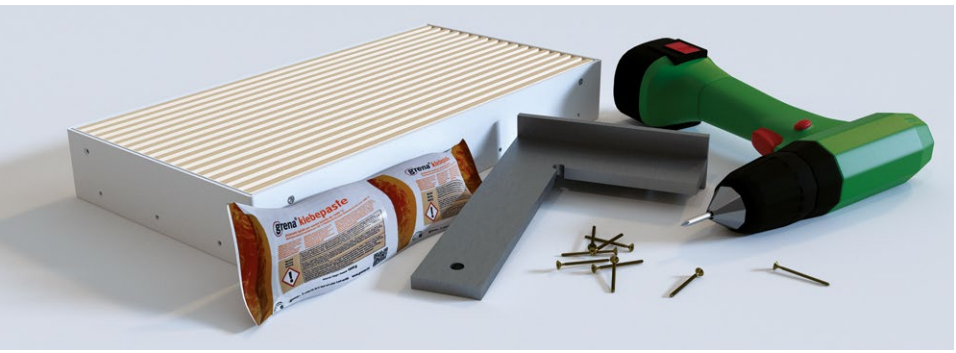

You will need:

- Grena klebepaste glue
- self-tapping screws 4 x 40 mm
- a drill with a Phillips bit
- a try square



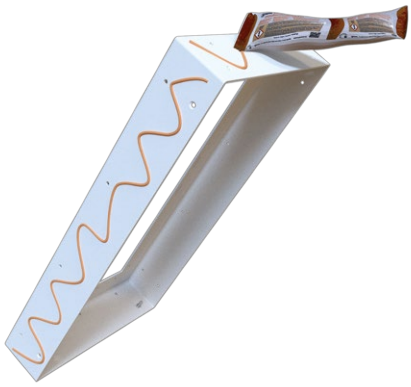

1. In the fireplace enclosure make a space about 5 mm bigger than the inspection door frame.

2. Strengthen the edges of the inner side of the fireplace by Grenaisol strips. Apply Grena klebepaste glue on the strips and fasten them by self-tapping screws.

According to the room temperature wait approx. 60 minutes for the glue to get dry.





3. Remove the inspection door leaf from the frame *(point No. 1 on the previous page)*. On the outside part of the frame apply Grena klebepaste glue.

4. Insert the frame in the prepared construction hole and fasten it by self-tapping screws.



5. Use a try square to check if the frame has not been deflected.

6. Seal the gap between the frame and the wall by the glue and wait for it to get dry.

7. Hang the door leaf in the frame, fasten the safety chain and close the door leaf.

grenacoat®

Distributor: **www.grena.cz** | grenamat@grena.cz | +420 381 549 215

GRENA, a.s., Třída Čs. armády 541, 391 81 Veselí nad Lužnicí II, Czech Republic

MPRTNAVA42CONTROL-UNI-EN180815

EN